

# Download Lennox Commercial Thermostat Manual

thermostat is running the fan, the fan bladesymbol appears next to FAN to indicate the thermostat has the fan on. Manual Override of Fan Schedule AUTO-fan is automatically following the FAN schedule (choices are AUTO and ON). ON-fan runs continuously (programmable for all SCHEDULE periods).-overrides FAN schedule. The fan is continuously on. Page 11. HEAT - thermostat controls the heating system. OFF - both heating and cooling systems are off. COOL - thermostat controls the cooling system. - thermostat controls both the heating and cooling systems based on temperature. AUTO Setting Temperature Overrides There are three temperature override options:...Lennox commercial equipment does not use Install Wallplate the heat pump system terminals. Install the thermostat horizontally on the wall (see... Page 3 When using separate transformer for heating and cooling, the common must come from the cooling transformer. 3 Lennox commercial heat pumps do not use this terminal to energize the reversing valve. Thermostat will always be conventional type. 4 Reference economizer literature for wiring details. COOL ?? Thermostat controls cooling system. AUTO ?? The thermostat switches the system from the heating mode to the cooling mode based on tempera- ture. EM HEAT ?? Heat pump systems only ?? Thermostat controls emergency heat and auxiliary heat, if needed. Heat pump compressor is not operational.