

Download Priefert Head Gate Model 91 Owners Manual

Priefert Model 91 Automatic/Manual Headgate Manual Operation 1. Turn automatic selector lever (#9) toward rear of gate, disengaging it from operator's handle (#8). This lever is located at the top back corner of the gate above the operator handle. 2. The gate's latch boxes (#1) (locking mechanism) are automatically disengaged when the handle isModel 91 Headgate operates in manual or automatic catch mode. Engage the automatic catch feature by moving the auto-catch lever forward to activate the spring. When in automatic mode, set the self-catch lever on the front of the headgate to select one of 4 opening widths. Page 1 Operator Instruction Priefert Model 91 Automatic/Manual Headgate Caution Be familiar with handling livestock prior to use of this equipment. Working with livestock carries inherent risk of injury or death. See page 3 for additional information on safe practices for handling of livestock. Priefert's Model 91 headgate operates in manual or automatic mode and its Infinite Locking System is guaranteed for life. Selection varies by store, contact store for availability. Additional information